UG_N32G032 Series BOOT User Guide V1.2.0

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

CONTENTS

CONTENTS **2**

1. Overview **3**

BOOT briefly 3

1.1. BOOT function definition 4

2. BOOT process and command processing **5**

2.1. Start the process 5

2.2. Commands and data structure 6

2.2.1. The list of commands 6

2.2.2. Data structure 6

2.3. Command description 8

2.3.1. CMD_ SET_BR 8

2.3.2. CMD_GET_INF 9

2.3.3. CMD_FLASH_ERASE 11

2.3.4. CMD_FLASH_DWNLD 13

2.3.5. CMD_DATA_CRC_CHECK 15

2.3.6. CMD_OPT_RW 18

2.3.7. CMD_ USERX_OP 20

2.3.8. CMD_SYS_RESET 23

2.3.9. CMD_APP_GO 24

2.4. Return the status word description 25

2.4.1. Returns the success status word 25

2.4.2. Returns the failure status word 25

2.4.3. Return other status words 25

3. Version history **27**

4. Notice **28**

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

1. Overview

BOOT briefly

The firmware program of the MCU, namely BOOT, mainly provides user program download, API and other functions.

This document describes the functions, implementation, and usage of the N32G032 series MCU BOOT in detail. The N32G032 series MCU have a maximum of 64KB of FLASH memory, 3KB of BOOT memory, and 8KB of SRAM.

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

1.1. BOOT function definition

- **User program download function**
  - Support USART (the default initial baud rate is 9600, support baud rate instruction setting, Supported baud rates 4800, 9600, 14400, 19200, 38400, 57600, 115200, 128000, 256000, 576000, 923076);
  - Support download data CRC32 verification;
  - Supports FLASH partition
  - Support software reset MCU;
  - Support jump to user program.

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

2. BOOT process and command processing

N32G032 series MCU firmware program BOOT, support to download user programs and data through the USART interface. The following describes the command processing flow diagram.

2.1. Start the process

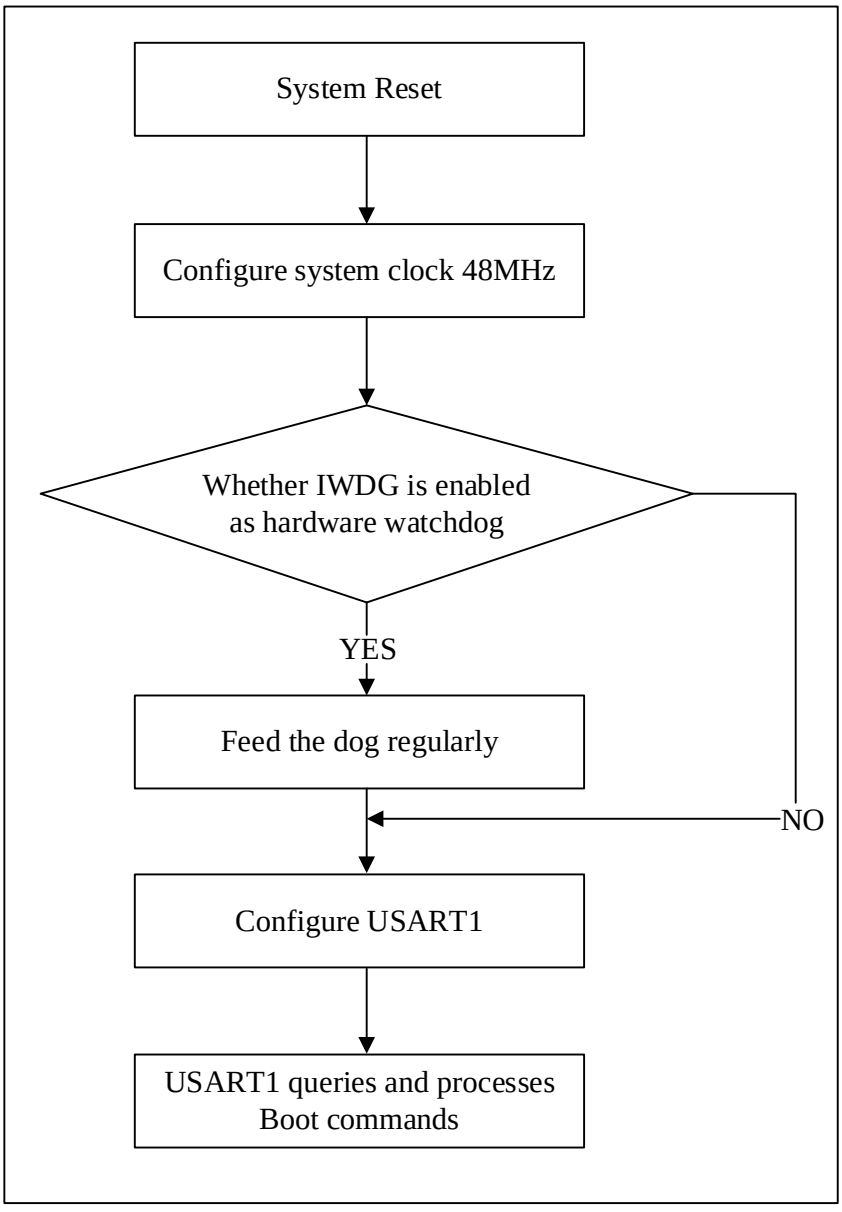

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

Figure 2.1 Boot Startup flow

Serial port startup process:

1) The default initial baud rate is 9600bps. The host computer uses the command CMD_SET_BR to send the baud rate set by the user to the MCU at 9600bps according to the baud rate set by the user (for example, 115200bps);.
2) After receiving the CMD_SET_BR, the MCU responds and sets the baud rate of the serial port to the value set by the user (for example, 115200bps).
3) The host computer sets the baud rate of the serial port to the value set by the user (for example, 115200bps), and then communicates normally.

2.2. Commands and data structure

2.2.1. The list of commands

Table 2.1 Command definition

Name of the command	Value	Instruction
CMD_SET_BR	0x01	Set the baud rate of the serial port (Valid only when serial ports are used)
CMD_GET_INF	0x10	Read MCU model index, BOOT version number, MCU ID
CMD_FLASH_ERASE	0x30	Erase FLASH
CMD_FLASH_DWNLD	0x31	Download user programs to FLASH
CMD_DATA_CRC_CHECK	0x32	CRC verification download user program
CMD_OPT_RW	0x40	Read/configure option bytes (including read protection level, FLASH page write protection, DATA0/1 configuration,)
CMD_USERX_OP	0x41	Get the partition USERX size and set the partition USERX size
CMD_SYS_RESET	0x50	The system reset
CMD_APP_GO	0x51	Jump to user area to execute the program

2.2.2. Data structure

This section describes some conventions described in the following sections. "<>"

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

represents fields that must be included, and "()" represents the fields that included according to different parameters.

Upper and lower instruction data structure

1. Upper instruction structure:

<CMD_H + CMD_L + LEN + Par> + (DAT).

CMD_H indicates the level-1 command field, and CMD_L indicates the level-2 command field. LEN indicates the length of data to be sent.Par represents a four-byte command parameter; DAT represents the specific data sent from the upper level instruction to the lower level;

2. Lower response structure:

< CMD_H + CMD_L + LEN > + (DAT) + <CR1+CR2>.

CMD_H indicates the level-1 command field, and CMD_L indicates the level-2 command field. The command fields at the lower level are the same as those at the upper level. LEN indicates the length of data to be sent. DAT indicates the specific data that the lower layer replies to the upper layer. CR1+CR2 indicates the command execution result returned to the upper layer. If the level-1 and level-2 command fields do not belong to any command, BOOT replies CR1=0xBB and CR2 = 0xCC.

Command data structures supported by the serial port:

1. The host computer issues the upper instruction:

STA1 + STA2 + {Upper instruction structure} + XOR.

STA1 and STA2 are the start bytes of commands sent through the serial port. STA1=0xAA and STA2=0x55. Used for MCU identification upper computer to send serial data stream.

XOR represents the XOR operation value of the previous command byte (STA1 + STA2 + {Upper instruction structure}).

2. The upper computer receives the lower response:

STA1 + STA2 + {Lower response structure} + XOR.

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

STA1 and STA2 are the start bytes of commands sent through the serial port. STA1=0xAA and STA2=0x55. It is used for the host computer to identify MCU and send serial port data stream

XOR represents the XOR operation value of the previous command byte (STA1 + STA2 + {Lower response structure}).

Note: In BOOT V1.0 (for the command of obtaining version information, see section 2.3.2), XOR does not operate on CR2 but only on bytes preceding CR2, that is (STA1 + STA2 + {< CMD_H + CMD_L + LEN > + (DAT) + <CR1 >})

2.3. Command description

2.3.1. CMD_ SET_BR

This command is used to change the baud rate of the serial port.

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x01 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3(LEN)	Length of send data: 0x00,0x00							
4~7(Par)	Par[0~3] : Set baud rate parameters							
(DAT)	None							

- Par[0~3], the serial port baud rate can be set to a typical value;

Par[0~3]	Toggle specified baud rate (BPS)
0x000E15C4	923076
0x0008CA00	576000
0x0003E800	256000
0x0001F400	128000
0x0001C200	115200

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

0x0000E100	57600
0x00009600	38400
0x00004B00	19200
0x00003840	14400
0x00002580	9600
0x000012C0	4800

- Reserved value: 0x00;

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x01 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3(LEN)	Length of send data: 0x00,0x00							
(DAT)	None							
4(CR1)	Status byte 1							
5(CR2)	Status byte 2							

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (0xB0, 0x00).

2.3.2. CMD_GET_INF

The function provided by this command is to read the BOOT version number, MCU model index, and MCU ID.

Upper instructions:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x10 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

2~3 (LEN)	Length of send data
4~7(Par)	Reserved
(DAT)	None

- Reserved value: 0x00.
- LEN Send data length: 0x00(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] +(LEN[1]<<8).

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x10 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3 (LEN)	The length of the data							
4~54(DAT)	BOOT version, MCU model index, MCU ID							
55(CR1)	Status byte 1							
56(CR2)	Status byte 2							

- The procedure byte (CMD_H) corresponds to the upper instruction (CMD_H).
- LEN is the data length: 0x33(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- DAT[0] : Chip model index
- DAT[1] : 0xXY, BOOT version (BCD code)

X: indicate the peripheral interface of BOOT.

X=0：indicates the use of USART1.

For example ,if X=0, it means USART1 is used.

Y: indicate the version of the instruction set used by BOOT.

Y=1：indicates the use of the instruction set version 1.0.

- DAT[2] : BOOT command version
- DAT[3~50] : 48Byte

1. DAT[3~18] : 16Byte UCID (for details about the UCID, see the user manual).

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

2. DAT[19-30] : 12Byte MCU ID(UID) (for details, see the user manual).
3. DAT[31~34]: 4Byte DBGMCU_IDCODE (for details about DBGMCU_IDCODE, see the user manual).
4. DAT[35~50] : 16 bytes other information

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (0xB0, 0x00).

2.3.3. CMD_FLASH_ERASE

BOOT provides the function of erasing FLASH in units of pages. The erasure page address number and page number are provided by the user. The erased FLASH space cannot exceed the entire FLASH space, and at least 1 page (512Byte) is erased.

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x30 Level-1 command field							
1(CMD_L)	Level-2 command field: erases the partition number							
2~3(LEN)	Length of send data (0)							
4~7(Par)	Page address number 2 bytes: 0 to 255 Page Number 2 bytes :1 to 256							
(DAT)	None							

- CMD_L: erases the partition number

1. 0x00 = USER1;
2. 0x01 = USER2;
3. 0x02 = USER3;

- LEN Send data length: 0x10(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

- The erase address and range consist of four bytes in the Par field

  Par[0~1] : page address number 2 bytes (0~255)

  Page address number = Par [0] + Par [1]<<8;

  Par[2~3] : Page number 2 bytes (1~256)

  Page number = Par [2] + Par [3]<<8;

  The first address of page 0 is 0x0800_0000. The number of subsequent pages is increased by 1, and the first address is added to 0x200.

  For example:

  The first address of page 1 is 0x0800_0000 + 1*0x200 = 0x0800_0200

  The first address of page 2 is 0x0800_0000 + 2*0x200 = 0x0800_0400

  The entire address range erased

  For example, the page address is 0x01 and the number of pages is 0x02

  Erasing address range:

  (0x0800_0000 + 1*0x200) ~ (0x0800_0000 + 1*0x200 + 2*0x200)

  That is, (first address of the page number) to (first address of the page number + (number of pages)*(page size))

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x30 Level-1 command field							
1(CMD_L)	Level-2 command field: erases the partition number							
2~3(LEN)	Length of send data							
(DAT)	None							
4(CR1)	Status byte 1							
5(CR2)	Status byte 2							

- LEN Send data length: 0x00(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (CR1, CR2).

(1), (0xB0, 0x00) : return failure;

(2), (0xB0, 0x30) : The erased FLASH page is protected by RDP;

(3), (0xB0, 0x31) : The erased FLASH page is protected by WRP;

(4), (0xB0, 0x32) : Erase FLASH page is protected by partition;

(5), (0xB0, 0x33) : Erase FLASH page range across partitions;

(6), (0xB0, 0x34) : The FLASH address range is out of bounds (that is, it exceeds the size of the entire FLASH);

(7), (0xB0, 0x37) : Failed to erase the FLASH.

2.3.4. CMD_FLASH_DWNLD

This command allows the user to download code into the specified FLASH. Data length must be 16 bytes aligned (0x00 automatically added by the host computer when the length is less than 16 bytes.), all provided by upper-layer commands. Plaintext download.

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x31 Level-1 command field							
1(CMD_L)	Level-2 command field: Download partition number							
2~3(LEN)	Length of send data							
4~7(Par)	Start address for downloading the FLASH							
8~23+N(DAT)	DAT[0~15] : Reserved, all is 0 DAT[16~16+N] : Specific data downloaded DAT[N+1~N+4] : 4 byte CRC32 check value of data							

- CMD_L: indicates the number of the download partition

1. 0x00 = USER1;

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

2. 0x01 = USER2;

3. 0x02 = USER3;

- LEN Send data length: 0xXX(LEN[0]), 0xXX(LEN[1]), LEN = LEN[0] + (LEN[1]<<8)
- Par [0 ~ 3]: download the starting Address of the FLASH, synthetic rules to Address = Par[0] | Par[1]<<8 | Par[2]<<16 | Par[3]<<24.
- DAT[0~15] : Reserved, all is 0
- DAT[16~16+N]: Specific data to be downloaded

  USART: contains a maximum of 128 bytes. 15<=N<=143. N+1 must be a multiple of 16.

  DAT[N+1~N+4]: 4 byte CRC32 check value of data

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x31 Level-1 command field							
1(CMD_L)	Level-2 command field: Download partition number							
2(LEN)	Length of send data							
(DAT)	None							
3(CR1)	Status byte 1							
4(CR2)	Status byte 2							
5(XOR)	XOR result							

- LEN Send data length: 0x00(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Download success: status flag bit (0xA0, 0x00).
2. Download failed: status flag bit (CR1, CR2).

(1), (0xB0, 0x00): Return failure;

(2), (0xB0, 0x30): The downloaded FLASH address is protected by RDP;

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

(3), (0xB0, 0x31): The downloaded FLASH address is protected by WRP;

(4), (0xB0, 0x32): The downloaded FLASH address is protected by partition

(5), (0xB0, 0x33): Download FLASH address range across partitions;

(6), (0xB0, 0x34): Download FLASH address range is out of bounds (refers to beyond the size of the entire FLASH);

(7), (0xB0, 0x35): Download FLASH start address is not 16 bytes aligned;

(8), (0xB0, 0x36): The downloaded FLASH data length is not a multiple of 16;

(9), (0xB0, 0x37): Failed to program the FLASH.

2.3.5. CMD_DATA_CRC_CHECK

This command is used to check whether the downloaded data is correct. Considering the download speed and low probability of download failure, the CRC check is performed after the downloaded data is complete. The upper command must provide the CRC value, start address, and check length of the downloaded data.

Upper instructions:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x32 Level-1 command field							
1(CMD_L)	Level-2 command field: Parity partition number							
2~3(LEN)	Length of send data							
4~7(Par)	32-bit CRC check value							
8~31(DAT)	DAT [0~15]: Reserved DAT[16~19]: Start address of the verification DAT[20~23]: Verification length (in bytes, minimum length 512B)							

- CMD_L: indicates the verification partition number

  1. 0x00 = USER1;

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

2. 0x01 = USER2;

3. 0x02 = USER3;

- LEN Send data length: 0x18(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- Par [0 ~ 3]: 32 bit CRC checksum value, the synthetic rules for CRC32 = CRC32 = Par[0] | Par[1]<<8 | Par[2]<<16 | Par[3]<<24.
- CMD_L = 0x00:16 bytes are all 0x00.
- DAT [0~15]: reserved, all is 0
- DAT [16 ~ 19]: check the starting Address, the synthesis rules to Address = DAT [16] | DAT [17] < < 8 | DAT [18] < < 16 | DAT [19] < < 24, the Address can only be in the range of the FLASH.
- DAT [20 ~ 23]: check length, its synthesis rules for CRC_LEN = DAT [20] | DAT [21] < < 8 | DAT [22] < < 16 | DAT [23] < < 24, CRC_LEN is only within the effective range, length is larger than 2 KB, and is a multiple of 16.

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x32 Level-1 command field							
1(CMD_L)	Level-2 command field: Parity partition number							
2~3(LEN)	Length of send data							
(DAT)	None							
4(CR1)	Status byte 1							
5(CR2)	Status byte 2							

- LEN send data length: 0x00(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Verification succeeded: status flag bit (0xA0, 0x00).
2. Check failure: status flag bit (CR1, CR2)

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

(1), (0xB0, 0x00): return failure;

(2), (0xB0, 0x32): CRC check addresses are protected by partitions.

(3), (0xB0, 0x33): CRC check address range is across partitions;

(4), (0xB0, 0x34): CRC check address range is out of bounds (refers to the size of the entire FLASH);

(5), (0xB0, 0x35): CRC check address is not 16-byte alignment;

(6), (0xB0, 0x36): The CRC check length is not a multiple of 16 or less than 512 BYTES.

(7), (0xB0, 0x38): CRC verification failed.

The CRC32 model is as follows：

The software implementation code of CRC is as follows:

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

```
u32 CRC32_Calculate(u32* data,u32 len)
{
    u32 crc=0xffffffff, xbit=0,data0=0,i=0,j=0;
    u32 polynomial = 0x04c11db7;
    for(i=0;i<len;i++)
    {
        xbit = 0x80000000;
        data0 = *data++;
        for(j=0;j<32;j++)
        {
            if(crc & 0x80000000)
            {
                crc= (crc<<1)^polynomial;
            }
            else
            {
                crc<<=1;
            }

            if(data0 & xbit)
            {
                crc ^= polynomial;
            }
            xbit >>= 1;
        }
    }
    return crc;
}
```

2.3.6. CMD_OPT_RW

This command is used for option byte read and write (including read protection level, FLASH page write protection, Data0/1 configuration, and USER configuration). When partitions are configured, it is not allowed to change the read protection level from L1 to L0, as it will result in a mass erase of the user area.

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x40 Level-1 command field							
1(CMD_L)	Level-2 command field							
2~3(LEN)	Length of send data							
4~7(Par)								

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

8~23(DAT)	Option byte configures 16 bytes

- CMD_L Level-2 command field:
  1. 0x00: Gets option bytes.
  2. 0x01: Configuration option byte.
  3. 0x02: Configuration option byte, reset again.
- LEN Send data length: 0x14(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- DAT[0~15]: Option bytes 16 bytes

RDP, nRDP, USER, nUSER, Data0, nData0, Data1, nData1, WRP0, nWRP0, WRP1, nWRP1, RDP2, nRDP2, Reserved, nReserved;

1. CMD_L = 0x00: all values are 0x00.
2. CMD_L = 0x01/0x02: Configuration option bytes are the values to be written.

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x40 Level-1 command field							
1(CMD_L)	Level-2 command field							
2~3(LEN)	Length of send data							
4~19(DAT)	Option byte configures 16 bytes							
24(CR1)	Status byte 1							
25(CR2)	Status byte 2							

- LEN send data length: 0x14(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- DAT[0~15]: The current option contains 16 bytes

RDP, nRDP, USER, nUSER, Data0, nData0, Data1, nData1, WRP0, nWRP0, WRP1, nWRP1, RDP2, nRDP2, Reserved, nReserved;

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

1. Return success: status flag bit (0xA0, 0x00).
2. Check failure: status flag bit (CR1, CR2)

(1), (0xB0, 0x00): return failure;

(2), (0xB0, 0x39): The matched area is sealed and the read protection level is not allowed to be reduced from L1 to L0;

2.3.7. CMD_ USERX_OP

This command is used to read or configure the size of the user1/2/3 partition. After the partition is configured, the partition is automatically sealed. The user1/2/3 partition can be configured only once. The software determines whether the NVR MMU partition has been configured (process variables or random delay are added to determine the NVR value).

The recommended configuration process is as follows:

1. If you need to divide two areas, configure USER3 (automatic sealing is complete).If you want to also seal USER1, configure USER1 again. The size of USER1 + USER3 must be the size of the entire FLASH;

2. To divide three zones, configure USER3 (automatic sealing is configured) and then USER2 (automatic sealing is configured).If you want to also seal USER1, configure USER1 again.The size of USER1 + USER2 + USER3 must be the size of the entire FLASH.

Upper-level instructions:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x41 Level-1 command field							
1(CMD_L)	Level-2 command field							
2~3(LEN)	Length of sent data							
4~7(Par)	Par[0] : Partition User1/2/3							
	Par [1] : Partition user1/2/3 size							

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

	Par [2] : Reserved to 0x00
	Par [3] : Reserved to 0x00
DAT	None

- CMD_L Secondary command field:
  1. 0x00: Read partition user1/2/3 size configuration.
  2. 0x01: configure partition user1/2/3 size.
- LEN Send data length: 0x00(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- Par[0] : Partition number
  1. 0x00: partition USER1.
  2. 0x01: partition USER2.
  3. 0x02: partition USER3.
- Par [1] :
  1. CMD_L = 0x00:0x00.
  2. CMD_L = 0x01: partition user1/2/3 size configuration

  Input range for user1 partition: 0x0:4KB, 0x1:8KB... 0x0F:64KB;

  Input range for user2/3 partition: 0x0:0KB(默认), 0x1:4KB... 0x0F:60KB,

  USER1 + USER2 + USER3 = 64KB;The user area user1/2/3 size is automatically sealed after configuration.

  Partition size and address determined

  The start address of the partition is 0x0800_0000, and the end address of the partition is the start address plus the total FLASH capacity (for example, if the FLASH capacity is 64 KB, the end address is 0x0800_0000 + 128*0x200 = 0x0801_0000).

  If USER1 is partitioned, the partition address of USER1 ranges from 0x0800_0000 to (0x0800_0000 + (USER1_Size+1)*0x1000).

  If USER3 is partitioned, the partition address of USER3 ranges from (0x0801_0000 - USER3_Size*0x1000) to 0x0801_0000 (for example, the

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

last FLASH address is 0x0801_0000).

The initial address of the partition of USER2 is the last address of USER1 and the first address of USER3.If USER1 has no partition, the first address of USER2 needs to be determined by USER2_Size.

Underlying response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x41 Level-1 command field							
1(CMD_L)	Level-2 command field							
2~3(LEN)	Length of sent data							
4~7(DAT)	DAT[0] : partition user1/2/3							
	DAT[1] : partition user1/2/3 size							
	DAT[2] : Reserved to 0x00							
	DAT[3] : Reserved to 0x00							
8(CR1)	Status byte 1							
9(CR2)	Status byte 2							

- LEN Send data length: 0x02(LEN[0]), 0x00(LEN[1]), LEN = LEN[0] + (LEN[1]<<8).
- DAT[0] : indicates the partition number
  1. 0x00: partition USER1.
  2. 0x01: partition USER2.
  3. 0x02: partition USER3.
- DAT[1] : Read the current partition user1/2/3 size

  Input range for user1 partition: 0x0:4KB, 0x1:8KB... 0x0F:64KB;

  Input range for user2/3 partition: 0x0:0KB(默认), 0x1:4KB... 0x0F:60KB, USER1 + USER2 + USER3 = 64KB.
- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (0x70, 0x00)
   1) (0xB0, 0x00) : return failed.
   2) (0xB0, 0x3A) : The partition size has been configured and cannot be configured again.
   3) (0xB0, 0x3B) : the partition size is incorrectly configured. USER1 + USER2 + USER3 = FLASH capacity.
   4) (0xB0, 0x3C) : The partition configuration sequence is incorrect and USER1 or USER3 must be configured first.

2.3.8. CMD_SYS_RESET

This command is used to reset the BOOT program.

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x50 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3(LEN)	Length of send data							
4~7(Par)	Reserved							
(DAT)	None							

- Reserved value: 0x00;

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x50 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3(LEN)	Length of send data							
(DAT)	None							
4(CR1)	Status byte 1							

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

5(CR2)	Status byte 2

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (0xB0, 0x00).

2.3.9. CMD_APP_GO

This command is used to reset the program entry address (0x0800_0000) after the BOOT program is downloaded to the FLASH(After enabling user partitions, it is not recommended to execute jump instructions because it may be impossible to reset the starting address of the interrupt vector table, causing the user program to be unable to handle interrupts properly).

Upper instruction:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x51 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3(LEN)	Length of send data							
4~7(Par)	Reserved							
(DAT)	None							

- Reserved value: 0x00;

Lower response:

byte \ bit	b7	b6	b5	b4	b3	b2	b1	b0
0(CMD_H)	0x51 Level-1 command field							
1(CMD_L)	0x00 Level-2 command field							
2~3 (LEN)	Length of send data							
(DAT)	None							

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

4(CR1)	Status byte 1
5(CR2)	Status byte 2

- Status bytes (CR1 and CR2) are divided into the following types according to command execution:

1. Return success: status flag bit (0xA0, 0x00).
2. Return failure: status flag bit (0xB0, 0x00).

2.4. Return the status word description

2.4.1. Returns the success status word

Return success: status flag bit (0xA0, 0x00). The command from the upper layer is successfully executed, and the success status is displayed.

Contains the success return value of the read, update, configure, and other commands.

2.4.2. Returns the failure status word

Return failure: status flag bits (0xB0, 0x00). Indicates that the command delivered by the upper layer fails to be executed due to other reasons (such as incorrect command acceptance format or timeout). Failure status is returned.

2.4.3. Return other status words

The following return status words also return failure. The second byte status word indicates a different error type.

(1), (0xB0, 0x30): Erase/download FLASH page protected by RDP;

(2), (0xB0, 0x31): Erased/downloaded FLASH page is protected by WRP;

(3), (0xB0, 0x32): Erase/download /CRC check address is protected by partition;

(4), (0xB0, 0x33): Erase/download /CRC check address range across partitions;

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

(5), (0xB0, 0x34): The address range of erase/download /CRC is out of bounds (refers to the size of the entire FLASH);

(6), (0xB0, 0x35): Erase/download /CRC start address is not 16-byte alignment;

(7), (0xB0, 0x36): The length of the download /CRC check data is not a multiple of 16;Data length indicates the length of erasing FLASH, or the length of downloading code to FLASH, or the length of checking FLASH CRC values;

(8), (0xB0, 0x37): Failed to erase/download FLASH programming;

(9), (0xB0, 0x38): CRC verification fails;

(10), (0xB0, 0x39): Partition sealing has been configured, and read protection level is not allowed to be reduced from L1 to L0;

(11), (0xB0, 0x3A) : The partition has been configured and cannot be configured again.

(12), (0xB0, 0x3B) : The partition size is incorrect. USER1 + USER2 + USER3 = FLASH capacity.

(13), (0xB0, 0x3C) : The partition configuration sequence is incorrect and USER1 or USER3 must be configured first.

(14), (0xBB, 0xCC): The level-1 and level-2 command fields do not belong to any command.

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

3. Version history

Version	Date	Note
V1.1.0	2023-09-13	1. Create a document
V1.2.0	2025-10-19	1. Add descriptions of DAT[0~15] in Section 2.3.4 2. Add an image titled 'CRC32 Model and CRC Software Implementation Code' to Section 2.3.5

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg

4. Notice

This document is the exclusive property of NSING TECHNOLOGIES PTE. LTD. (Hereinafter referred to as NSING). This document, and the product of NSING described herein (Hereinafter referred to as the Product) are owned by NSING under the laws and treaties of Republic of Singapore and other applicable jurisdictions worldwide. The intellectual properties of the product belong to NSING Technologies Inc. and NSING Technologies Inc. does not grant any third party any license under its patents, copyrights, trademarks, or other intellectual property rights. Names and brands of third party may be mentioned or referred thereto (if any) for identification purposes only. NSING reserves the right to make changes, corrections. enhancements, modifications, and improvements to this document at any time without notice. Please contact NSING and obtain the latest version of this document before placing orders. Although NSING has attempted to provide accurate and reliable information, NSING assumes no responsibility for the accuracy and reliability of this document. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. In no event shall NSING be liable for any direct, indirect, incidental, special, exemplary, or consequential damages arising in any way out of the use of this document or the Product. NSING Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, Insecure Usage'. Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, all types of safety devices, and other applications intended to supporter sustain life. All Insecure Usage shall be made at user's risk. User shall indemnify NSING and hold NSING harmless from and against all claims, costs, damages, and other liabilities, arising from or related to any customer's Insecure Usage Any express or implied warranty with regard to this document or the Product, including, but not limited to. The warranties of merchantability, fitness for a particular purpose and non-infringement are disclaimed to the fullest extent permitted by law. Unless otherwise explicitly permitted by NSING, anyone may not use, duplicate, modify, transcribe or otherwise distribute this document for any purposes, in whole or in part.

NSING Technologies Pte. Ltd.
Address: 20 Science Park, #03-15/16
Teleteck Park, East Wing, Singapore 117674
Email: sales@nsing.com.sg